

IMPORTANT INSTALLATION **INSTRUCTIONS – PLEASE READ**

PLEASE NOTE THAT THIS REMOTE CONTROL UNIT (RECEIVER AND REMOTE CONTROL) HAS BEEN FULLY TESTED BEFORE BEING DESPATCHED AND IS IN FULL WORKING ORDER.

AS THE MOST COMMON CAUSE OF DAMAGE IS INCORRECT WIRING WE ASK OUR CUSTOMERS TO TEST THE UNIT THEMSELVES BEFORE INSTALLATION AND REPORT ANY PROBLEM AT THAT TIME

IF YOU HAVE ANY DOUBT AS TO THE CORRECT WIRING PLEASE DO NOT ATTEMPT CONNECTION BEFORE CHECKING WITH US. OUR TELEPHONE CONTACT IS 01986 899264

ACCIDENTLY ALLOWING AN OUTPUT TO CONNECT TO EARTH/GROUND, OR BY 'FLASHING' AN OUTPUT ONTO A CONNECTION WILL KILL THE RECEIVER!!

IF THE UNIT IS DAMAGED AS A RESULT OF INCORRECT INSTALLATION WE CANNOT BE HELD RESPONSIBLE FOR THE DAMAGED CAUSED.

Keyhole Style Remotes:

To turn your remote control on press and hold both the IN and OUT buttons until the constant light appears. The remote control is now active hold either the IN or OUT button to operate. This remote has an auto-off feature, or repeat as above to turn off manually.

**Below Are SPECIAL INSTRUCTIONS For Winchmax
Type 4 (External Mount Model) Remote Control
ONLY;**

Please install as per installation diagram and instructions. To turn your remote control on press and hold both the IN and OUT buttons until the constant blue light appears. The remote control is now active hold either the IN or OUT button to operate.

When you have finished using the device push and hold both the IN and OUT buttons until the blue light disappears. Your remote control is now turned off.

If you have any question please call our helpline on 01986 899264.